MIDMARK®

Installation Instructions

153634-001 Tray (9" x 13")

KIT COMPONENTS

Part Number	Description	Qty.
029-2657-00	Tray System, 9" (23cm) x 13" (33 cm)	1
• 122068	Screw (1/4"-20 x .75 Lg.Hex Hd.	1
• 118047	Washer	1
• 003-1176-00	Installation Instructions	1

REQUIRED TOOLS

7/16" Socket and Ratchet
Straight, thin blade Screwdriver
Small Punch and Hammer
Allen Wrenches

INSTALLATION

WARNING.
Uplug the chair before removing any covers or beginning the installation.

A. Remove bottom cover.

B. Using a punch and hammer, tap out tray mount plug from bottom side. It is glued in place with silicone.

NOTE

Tray assembly can be mounted to extend outward to either the left or right from the Doctor's Instrument Head. Determine which application is desired before mounting.

C. Position the tray assembly so the dowel pin is located in the correct hole in the base for left or right application and secure with the flat washer and 1/4"-20 x 3/4" bolt.

D. Check operation. If necessary, the amount of drag at the pivot points of the instrument tray arms can be adjusted by tightening or loosening the three socket head screws at each location.

NOTE

Maximum shelf load limitation is 15 lbs. (7 kg).
Check level of delivery unit and/or arm. If necessary, adjust level. Refer to Delivery Unit Leveling Adjustment or L/R Delivery Arm Leveling Adjustment in Service Manual.

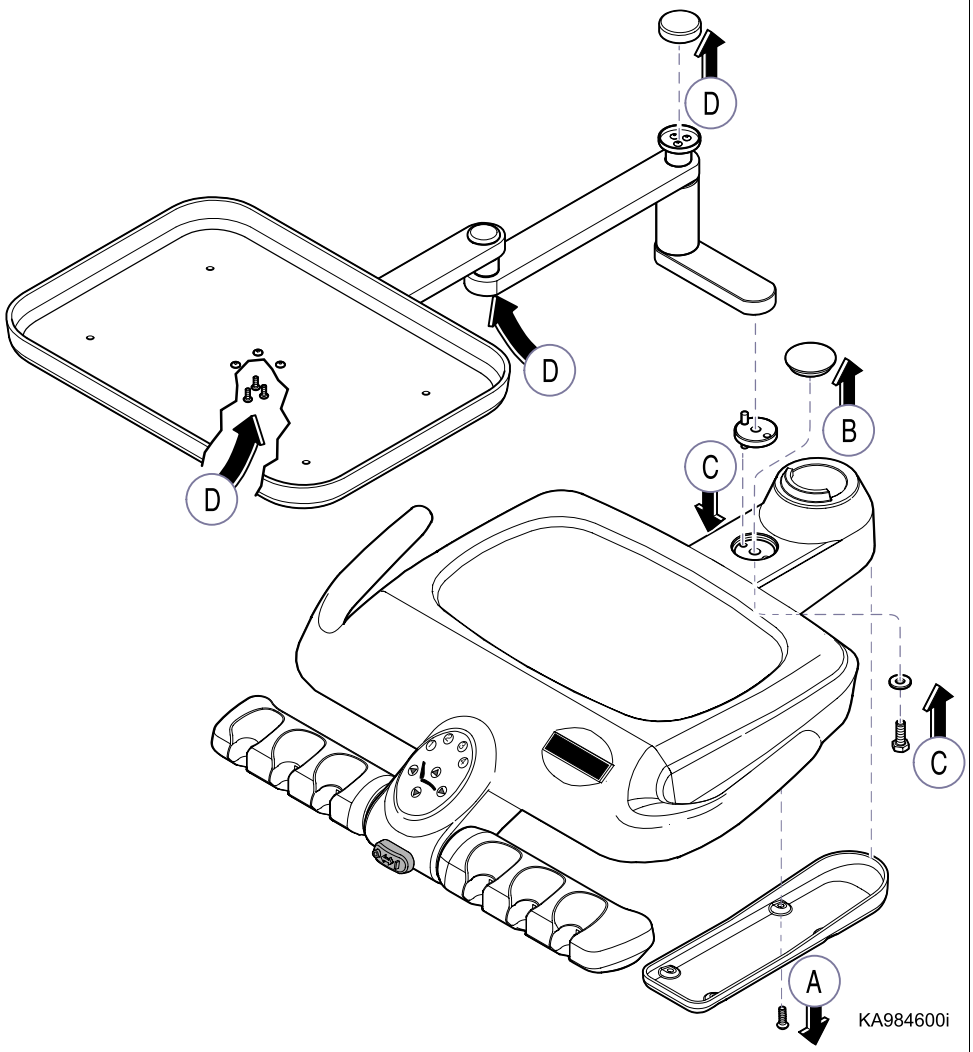

© Midmark Corporation - 2001

MIDMARK®
Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-1176-00 Rev. A (5/01)